

Manual 2021

General description	4
Installation of the software	5
Licensing of the software	7
First steps	8
Keyboard settings	
Versions of the software	
DEMO Version	11
FULL Version	
menu bar	
Title	
Title search	
search for title A-Z	
search form tilt-part	
search for keywords	
Navigate in the title list using the arrow keys	
Title new	
Title edit	
Title delete	
Title copy	
PDF synchron	
SETs	
Titlelist	
Titlelist new	
Titlelist delete	
Titlelist change	
Sheet music in PDF format	
Scan in scores	
Show scores	
MP3 POOL	
Video	
PRESETs	
PRESET copy	
Audio Record	
Service settings	
MIDI settings	
Scalable scores	
equipment	
footswitch	
bluetooth	
USB	
Microsoft wireless Display Adapter	
system requirements	
Tips und Tricks	
Use of internal help	
right mousekey	
remote maintenance	
Enter comments in sheet music	
Page curl with SEMPRA	
With the SEMPRA button	
With the SEMPRA pedal buttons	
Print out the title list	90

Hauptwerk	
hauptwerk	

The idea:

Stop lup music books or folders to the show. All notes in the computer, and when calling up and displaying a sheet music file it is also best to automatically set the keyboard correctly to the title.

ATMObyte Expander-Edition is a complex software, with an unlimited number of titles and the associated notes or texts in <u>PDF format</u>.
The titles can be distributed to any number of playlists. Titles can be assigned to 12 different <u>set's</u> and the desired set can be activated with one click.

For each title, a sound file in mp3 format can be deposited and played as required.

With the scanning function integrated in **ATMObyte Expander-Edition**, existing paper notes can be scanned directly. The correct assignment and saving in <u>PDF format</u> are automatic. Of course, already existing PDF files can be used. Calling a title not only displays the corresponding notes, but the title-related registration of the connected **SEMPRA** is called automatically.

The software runs under all Windows systems.

Mac systems require the installation of VMware Fusion beforehand. If a tablet computer is used, the software automatically adapts to the position of the tablet. When used vertically (portrait), the display automatically switches to 1-sided display, so that the sheet of music is displayed on the entire display. **ATMObyte Expander-Edition** but only start when the desired position of the display is done.

1.1 Installation from CD

After inserting the CD into the computer, the installation program starts automatically. If this does not happen please start the file *demo.exe* on the CD with a double-click.

1.2 Installation of the download version

In the download version, the program is automatically installed.

The following 2 menu options are now available:

ATMObyte Expander-Edition

Program Description

The **ATMObyte Expander-Edition** installation routine installs the program on your computer. The installation directory can be chosen freely and is preset to **C: **.

Installation is not possible in the directories **C: \ Programs** and **C: \ Programs (x86)**. These directories are systemically important. An installation would only require a change in the registry be possible and that should be avoided.

Only the folder **ATMObyteBSE** with all files belonging to the program will be copied to the hard disk and no changes are made to the system or the REGISTRY.

During the installation this message can come from Windows Defender,



but that has to do with Microsoft and their caution and


not with problems or dangers of the software itself.

Of course, Windows knows neither the program nor the manufacturer, so security is important first. You also get this message when installing many other programs.

The installation is carried out by clicking on **More information** and then on **Install anyway**.

When first started, the software starts as a <u>DEMO version</u>. To license the software, from the <u>DEMO version</u> to make a <u>full version</u>, the entry of a license code is necessary.

The entry is made in the menu item SERVICE under license.

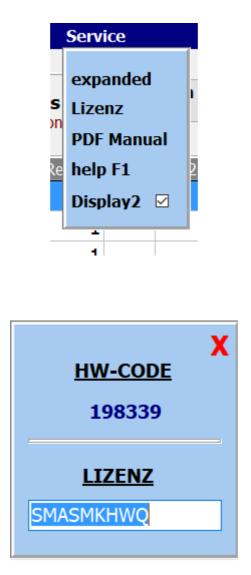

For the creation of the license code the serial number is always necessary.

First steps

At the first call the software starts as DEMO version. In the DEMO version the software can be extensively tested.

The only limitations are that the notes are overwritten with **DEMO**.

All functions, including the SEMPRA control, can be used without restrictions.

If a license code is available, the software can be registered with this code and is a full version.

If you want to call up the registration of the keyboard for the title you are calling, so the keyboard must first be set once to the correct <u>MIDI channel</u>.

This channel is specified by **ATMObyte Expander**-

Edition and can be changed under Service-> Settings.

When installing **ATMObyte Expander-Edition** for the first time, this is channel 16.

Keyboard settings

To use the registration call of the connected keyboard just change the MIDI setting of the SEMPRA as follows:

If the MIDI channel 16 is used, the following settings apply to the SEMPRA: MIDI IN Channel Preset Change 16 MIDI OUT Channel Preset Change 16

DEMO version

At the first call the software starts as DEMO version. In the DEMO version the software can be extensively tested.

The only limitations are that the notes are overwritten with **DEMO**.

All functions, including the SEMPRA control, can be used without restrictions.

FULL version


In the full version, is after entering a correct license code, all functions listed in the description are executable. The coverage of the notes with **DEMO** in the DEMO version is no longer visible.

menu bar

The individual functions of **ATMObyte Expander-Edition** can be called up via the buttons in the menu bar.




With *program* the ATMObyte Expander-Edition can be stopped

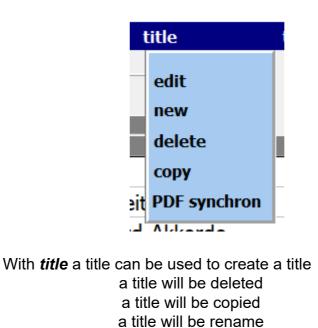



With *Titlelist* a new titlelist can be create a titlellist will be deleted a titlellsit will be renam

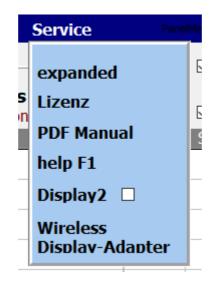

With **Service** you switch to the settings area of the program and important program properties can be changed.

With **extended** you get to the <u>global settings</u> for the program.

Under LICENSE the LICENSE will be activated as a full version.

X <u>HW-CODE</u> 198339
LIZENZ
Version: 11.12.2020

With PDF Manual the program documentation can be printed out as PDF.

The internal program description is called up via **Help F1**. This call can be made at any point in the program at any time.

If **Display 2** is activated, the notes from the subdirectory <u>PDF \ Display2</u> are displayed. Standard is PDF \ Display1.

With the <u>wireless display adapter</u>, the PC is wirelessly connected to a monitor or projector.

With **PRESETs** the 20 available PRESETs are called. These can be edited and / or played.

Keyboard on / off displays or hides an on-screen keyboard.

With the *country flags* the language of the program can be changed.

The two switches Software Control und and SEMPRA Control affect the control behavior of ATMObyte Expander-Edition.

If the switch Software Control is deactivated, the registration will be made for a title call the SEMPRA does not change. Only the notes are displayed. This allows playing a variety of titles with the same registration of the SEMPRA.

If the switch SEMPRA Control is deactivated, it will be activated on a SEMPRA preset call Seite 15 von 92

the note display does not change. So it can be the displayed title with different SEMPRA settings are played.

Title


A title is an entry in one of any number of <u>titlelists</u>. The number of titles in a <u>titlelist</u> is unlimited.

A title is called by its name.

This name also assigns the notes and any existing mp3 files or video files to the title.

These files must be named exactly as the title. If the <u>title</u> is Yesterday, the corresponding sheet PDF is Yesterday.pdf. The mp3 file Yesterday.mp3 and the video file Yesterday.mp4.

If **ATMObyte Expander-Edition's** internal <u>scanning</u> program is used to scan the scores, this will automatically generate the name of the <u>PDF file</u> correctly and the sheet music is stored in the directory. \ PDF \ Display1. The selection of a title can be done in different ways.

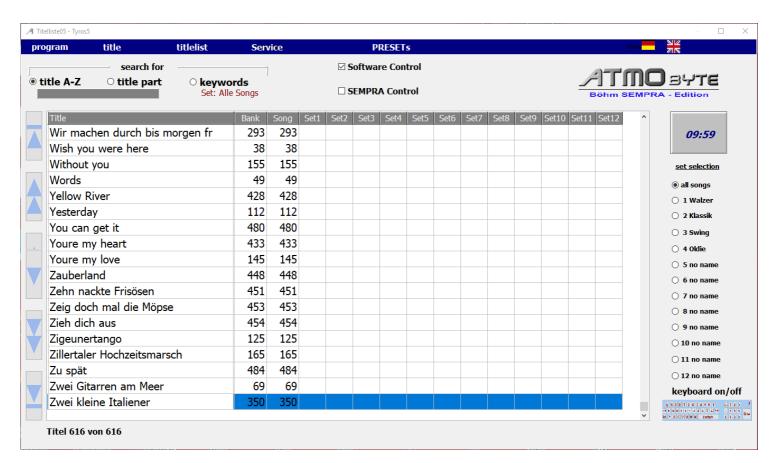

Mauscrollrad

The scroll wheel of the mouse scrolls through the title list.

arrow keys

Use the arrow keys to the left of the title list to maneuver.

onsceen keyboard

The title is selected using the screen keyboard below the title list. The on-screen keyboard can be displayed and hidden as desired.

The layout of the screen keyboard automatically adapts to the language setting of the PC.

This is done by means of the keyboard on / off button.

keyboard on/off

Q W E R T Z U I D P U S , 7 3 3 X ** 4 S D P S + 3 P L Š A ** + 7 5 3 50 Y Z C V B N N Lostack C L 2 3



All functions can be performed by mouse or with a touchmonitor by finger.


Searching for a <u>title</u> using the on-screen keyboard or the PC keyboard can be done after the <u>title</u>, is alphabetically or it can also be searched for a letter sequence in the <u>title</u> name. To do so, select Search for below Title bar or Title content below the menu bar.

	search for		_
• title A-Z	$^{\odot}$ title part	○ keywords	1
		Set: all songs	

If the <u>title</u> search is set to the beginning of the title, the first title that starts with **B** is selected by entering the letter **B**. If one enters now the letter **A** one ends up with the first title with the initial letters **BA**, e.g. Baker Street. If you enter an **R** and there is no title with the initial letters **BAR** in the title list, the first title is immediately marked with the initial letter **R**. During the title search for content, the entered letter sequence does not have to be at the beginning of the <u>title</u>, but may be somewhere in the title name.

All titles are then displayed in which the entered letter sequence exists.

If you enter e.g. If you enter the word ROSE, all titles appear with this letter sequence.

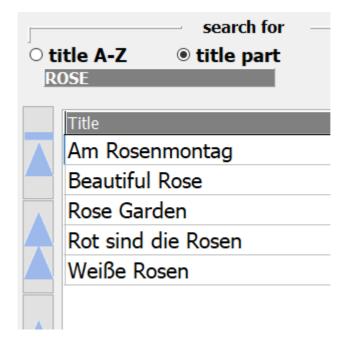

When searching for keywords, the middle touch panel displays all the keywords used in the program.

program	title	titlelist	Ser	vice			Р	RESET	s		
	search for			1		⊠ <mark>S</mark>	oftwa	re Cont	trol		
title A-Z	○ title part	keyw Set: Al	ords le Songs			□ S	EMPR	A Cont	rol		
Title			Bank	Song	Set1	Set2	Set3	Set4	S	keywords	
Wir feie	rn Karneval am	Rhein	286	286						Abba	
Wir mad	chen durch bis i	norgen fr	293	293						Achim	
Wish yo	u were here		38	38						Adele	
Without	you		155	155						Andrea	
Words			49	49							
Yellow F	River		428	428						Anlage	
Yesterda	ау		112	112						Ballade	
You can	get it		480	480						Barber	
Youre m	ny heart		433	433						Beat	
Voure m	ny love		145	145						Beatles	
Zauberl	and		448	448						Beatrice	
Zehn na	ackte Frisösen		451	451						Bee Gees	
Zeig do	ch mal die Möps	e	453	453						Berg	
Zieh dic	h aus		454	454						-	
Zigeune	ertango		125	125						Bert	
	er Hochzeitsmar	sch	165	165						Beyonce	
Zu spät			484	484						Blues	
	tarren am Meer		69	69						Blunt	


If you now use the keyword Udo_Jürgens, the title display shows all <u>titles</u> to which this keyword has been assigned.

A Titelliste05 - Tyros5

pro	gram	title	titlelist	Ser	vice			P	RESET	s		
		— search for					⊠ <mark>S</mark>	oftwa	re Con	trol		
	tle A-Z ATLES	○ title part	keywo Set: Alle				□ <mark>S</mark>	EMPR	A Cont	trol		_
	Title			Bank	Song	Set1	Set2	Set3	Set4	S	keywords	1
		eed is love		197	197						Abba	^
	And I Lov			227	227						Achim	
	Beatles №			406	406						Adele	. II.
	Cant buy			198							Andrea	
		vs a week		199	199						Anlage	
	From me	-		232	232						Ballade	
	Let It Be			1	86						Barber	
											Beat	
											Beatles	
											Beatrice	
											Bee_Gees	
\mathbf{M}											Berg	
											Bert	
											Beyonce	
											Blues	
$\mathbf{\nabla}$											Blunt	
											D I	*

Navigate in the title list using the arrow keys

The blue arrow keys to the left of the <u>titlelist</u> can be used to navigate as follows:

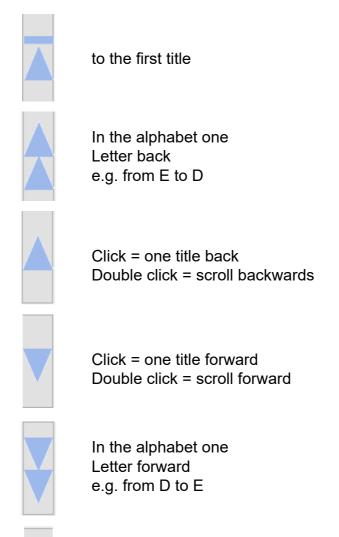



to the last title

With title-> new in the menu bar a title is added to the current title list, or by clicking on the *Insert key*.

The input mask then opens.



<u>tle</u>		keywords
Registration SEMPRA Bank 0 1 1 80 Song 0 1 64 Variante 0 0 6	Verknüpfung mit SEMPRA	UB40 Udo_Jürgens Vaya Verlosung Vicky Voice Volksmusik Walzer Wave Weihnacht Weihnacht
Button - Richtung		Wendler Western Westernhagen Whitney Wilingen
Querformat 🛛		Williams Willingen
X cancel scores	Scan 🗸 Save	Wilingen Wolfgang Women Zählon

The most important input is the title name. Without this input can not be saved.

For each <u>title keywords</u> can be assigned. After this, the <u>title</u> can then be searched.

The keywords already used in the program are listed in the list of tags and can be accepted with a double-click.

If a new keyword is entered, it is automatically added to the keyword list. Keywords can be the artist, the composer, the genre, the key, the epoch, and so on. The entries for registration have 3 values. 1. the registration bank 2. the registration memory to be started with. 3.the variant with which the song should be started


The values can be entered manually.

It is more elegant if the values are taken directly from the SEMPRA. Simply click on the green button again and then select the desired registration in the SEMPRA. All registry values from SEMPRA will then be automatically transferred to the software.

> The <u>Scan Scores</u> button allows scores to be scanned directly from the program and the title. This feature is detailed in <u>Scanning Scores</u>.

Title> Edit in the menu bar opens the selected title for editing. It then opens the same mask as when creating a new title. There are only the title name and all entered parameters of the title available.

The editing of a title can also be done by a click with the right mouse button on the title name.

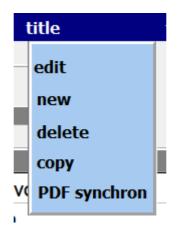

i <u>tle</u>	keywords
ll I Want For Christmas	UB40
eywords	Udo_Jürgens
Veihnacht Christmas Weihnachten	Vaya
	Verlosung Vicky
	Voice
Registration SEMPRAVerknüpfung mit SEMPRA	Volksmusik
Bank 1 1 80	Walzer
Song 115 1 64 neu lösen	Wave
Variante 5 0 6	Weihnacht
	Weihnachten
	Wendler
Button - Richtung	Western
Richtung	Westernhagen
3	Whitney
	Wilingen
Querformat 🗌	Williams Willingen
	Willingen
★ cancel scores Scan ✓ Save	Wolfgang
X cancelscores Scan√ Save	Women

The most important input is the title name. Without this input can not be saved. For each title keywords can be assigned. After this, the title can then be searched. The keywords already used in the program are listed in the list of tags and can be accepted with a *double-click*. If a new keyword is entered, it is automatically added to the keyword list.


Keywords can be the artist, the composer, the genre, the key, the epoch, and so on.

The entries for registration are described in Registration.

The <u>Scan Scores</u> button allows scores to be <u>scanned</u> directly from the program and the <u>title</u>. This feature is detailed in <u>Scanning Scores</u>. With Title-> delete in the menu bar a title can be deleted. Deleting can also be done by clicking on the *Del key*. When deleting, only the entry in the title list with all settings is removed.

	title
_	edit
	new
- 1	delete
	сору
V	PDF synchron
1	
Should	the title really be deleted?
	Amapola
	DF delete
×	no 🗢 yes

If the *Delete PDF* option is activated when deleting a title, the PDFs belonging to the title in **PDF\Display1** and **PDF\Display2** are not completely deleted, but rather moved to the **Archiv\Display1** or **Archiv\Display2** directories. From there these can be copied back into the **PDF \Display1** or **PDF\Display2** directories at any time. However, they are no longer visible for the **PDFsynchron** function. The **Title-> Copy** function in the menu bar allows you to copy a title.

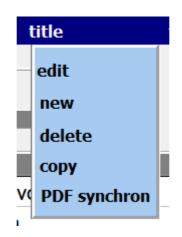

The title then appears with the same name and the extension **COPY**.

A women in Love	1	*	*	
 Alexis	139	*		
Alhambra	262	*		
Alice	114	*		*
 Alice Copy	114	*		*
All About That Bass	140	*	*	
 All By Myself	169	*		
All I Want For Christmas	115	*		

PDF synchron



This feature finds the PDF files in the **PDF\Display1** directory, that are not present in the current playlist. If you want to create a title from a displayed PDF, just click on the PDF and in the current title list a title with the name of the PDF is created.

Via **print list** a list with all PDF files in the directory **PDF\D isplay1** is printed out. The PDF's for which a title exists in the current playlist are marked with an **X**. ListPDF

		~
PDF	files not in titelli	st (2896)
Monsieur Dupon	t	^
Moon River (C)		
Moon River -o		
Moon River		
Moonlight -o		
Moonlight Seren	ade	
Moonlight Shado	W	
Moonlight		
Moonshadow		
Moorsoldaten		
More		
Morgen früh küs	s ich dich wach	
Morgen Kinder, v	wirds was geben	
Morgen kommt o	der Nikolaus	
Morgen kommt o	der Weihnachtsmann	
Morgen kommt o	derWeihnachtsmann UP	
Morgen -o		
Morgen um 7 ist	die Welt noch in Ordnur	ıg
Morgen		
Morgens um 7 (As)	
<		× >
Print List	× Cancel	Select all titles
	es can be selected down the Ctrl key.	Accept title
by norang (a contraction and the contraction	

 \times

SETs are the selections for the playlist, which are located on the right edge of the screen. The title list can be limited by the **SETs** to certain selection ranges



To assign a title to a **SET**, a star is generated for this title in the matrix for the relevant **SET** with a click. A further click on this field deletes the marking

Titel	Register	Set1	Set2	Set3	Set4	Set5	Set6	Set7	Set8	Set9	Set10	Set11	Set1
!aaaa	1												
!Test 3 Seiten	1	*											
54 74 90 Stiller	478	*		*									
7 Tage Sonne	237	*		*			*						
8 Seiten	1	*	*				*						
A women in Love	1	*	*				*						
Alexis	139	*					*						
Alhambra	262	*											
Alice	114	*			*	*							
Alice Kopie	114	*			*	*							
All About That Bass	140	*	*										
All By Myself	169	*											
All I Want For Christmas	115	*											
All my loving	115	*							*				
All shook up	120	*				*							
All you need is love	197	*											
Alles im Griff	457	*							*				
Aloha Hea	472	*											

If you now click on a **SET** on the right side of the screen, only the titles appear in the <u>title list</u>, which have been assigned to the **SET**.

The SET selection can also be made by clicking on the corresponding column header.

Set1	Set2	Set3	Set4	Set5	Set6	Set7	Set8	Set9	Set10	Set11	Set12
*											
*		*									
*		*			*						
*	*				*						
					-						

The names for the **SETs** can be changed by clicking with the right mouse button on the **SET** name. If no name is entered for a **SET**, the name is automatically entered as the name.

Tilel ist

A title list can contain an unlimited number of titles.

Any number of titlelists can be created.

At the first program start, the playlists are Titellistet00-DEMO - GENOS set with 10 titles as DEMO playlists.

If title ists are created, they start with the number 20.

Creating a new titlelist is done in the menu bar with titlelist-new.



An input window opens and the name of the new list can be assigned.

Enter a short name for the titlelist. (for example Christmassongs)						
cancel	next					

The self-created titlelists start with the number 20 and are numbered consecutively, e.g. Titlelliste20 Christmas.

If the new title list is successfully created, this is confirmed.

i	crea	Titelliste20 teted you can use	
		OK	

Via *titlelist-> Rename* in the menu bar, the name of the titlelist can also be changed later.




	change new delete rename	i I I		
Kurzbezeichnung von: Titelliste05 Tyros5				
Neue Kurzbezeichnung:				
Tyros5				
abbrech	en übe	ernehmen		

Deleting a title list is done with *titlelist-> delete* in the menu bar.



By clicking on the corresponding titlelist and confirming the deletion query, the selected titlelist is deleted.

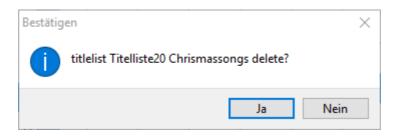

The active titl list and the DEMO Titellliste00 can not be deleted !!!

The change between the existing title lists is done by means of *title list-> change* in the menu bar.



In the opening selection window all available titlelists are listed. Click on the desired titlelist to activate it immediately.

Active Titlellist Titelliste05 - Tyros5 Titelliste00 - DEMO - TYROS4 ^ Titelliste01 - Pa3X
Titelliste01 - Pa3X
Titelliste02 - Tyros2
Titelliste04 - Tyros4
Titelliste05 - Tyros5
Titelliste08 - Rolf
Titelliste09 - Gesangbuch
Titelliste10 - Neue Liste
Titelliste11 - Gesamt GENOS
Titelliste12 - Gesamt Tyros 5
Titelliste13 - BUGARI
Titelliste14 - TestNI
Titelliste15 - Test

If notes are already available in PDF format, they can be used. They just have to be copied into this program folder. The PDF file must match the title name exactly, So for the *title Red Roses*, the PDF file *Red Roses.pdf* must be called. If printed notes are available for the title, they can be scanned in via the integrated <u>scan function</u>.

To do this, a scanner must be connected to the PC via USB.

If printed notes are available for the title, they can be scanned in via the integrated scan function. To do this, a scanner must be connected to the PC via USB.

title	
All I Want For Christmas	
keywords	
Weihnacht Christmas Weihnachten	
Registration SEMPRA Bank 1 1 80 Song 115 1 64 Variante 5 0 6	Verknüpfung mit SEMPRA
Button - Richtung	
Querformat 🗆	
X cancel sco	ores Scan 🗸 Save

Clicking *scan scores* will start scanning.

A Not	ten Scannen				\times
	Scannen Display1		Scan Displ		
	Abbrechen				

It can be selected whether the scanned notes are stored in .\PDF\Display1 or in . \PDF\Display2.

The optimal setting of the scanner must be made in the scan dialog and depends on the scanner. If the scanner shows 2 scanner drivers, please use the driver that starts with WIA.

Select source	×
Live! Cam Chat HD VF0790 EPSON Perfection V37/V370 Lexmark S300-S400 Series TWAIN Canon MF8200C Series Canon MG5100 ser CanoScan LiDE 120 WIA-EPSON Perfection V37/V370	
ОК	Cancel

After the scanning process, the notes are automatically stored in the correct folder and can be immediately called up and displayed with the title.

> There are no further entries like name of the <u>PDF file</u> or number of pages of notes necessary for the <u>title</u>, since this is done automatically by the program.

By clicking on the title name or pressing the *ENTER key* the sheet music for the title is displayed.



By clicking on the title name or pressing the ENTER key In this case, it is a title with several Notidenitenamae. With Exit you go back to the title selection.

If the PDF file has multiple pages and scrolling is necessary, the required buttons for turning pages are visible.

Turning these buttons can also be done via USB footswitch or via Bluetooth foot switch.

When using a monitor with touch function can also be wiping be browsed on the monitor.

If you want to turn pages of the <u>pages from the organ</u>, the command for Turning over in the organ can be placed on an organ switch, e.g. a switch on the footwell.

> If an mp3 file is available, it can be started via the *mp3 button*. This button is only visible if an mp3 file belonging to the title exists.

mp3
exit

Whether the control button should appear to the left or right of the notes, can be set under **SERVICE-> Settings** by clicking on the corresponding switch.

	Service	
	Einstellungen Lizenz PDF Manual Hilfe F1	is
N	otenanzeige	2
○ 1 Seite ● 2 Seiten □ Invertieren		ton Loder R

s a rule, two-page sheet music always displays 2 pages in parallel. In principle, a 1-sided display is desired, e.g. with small monitors, this can also be set under <u>SERVICE settings</u>.

The note display can also be inverted. The notes then appear in white on a black background. This option should be applied to the display in case of strong light.

MP3 POOL

With this function, 3 playlists can be filled with MP3 tracks and these can then be played back at will. This function is called up via the **MP3 button** in the top menu bar.

program	title	titlelist	Service	PRESETs	MP3
Select MP3 di	rootonu l):\Daten\Delphi\Turb			
Select MPS di	rectory: L		ODB\AIIIO\WF3\		
- select l	MP3 with a do	ouble click -			
25 Minutes To Go.	mp3	^			
3 Seiten.mp3			MP3 List 1	MP3 List 2 MP3 L	ist 3
8 Seiten.mp3 A Jeder Lebt So G	ern mn3				
A poor wayfaring			Am Fluss.mp3		
A week in a count					play
A whiter Shade of					
Abendstille überal	l.mp3				
Aber dich.mp3 Aber heidschi bun	nbeidschi mn3				Play all Title
Adelheid.mp3	in bolidooliiiipo				
Albany.mp3					
Albumblatt für Elis					Double click
Alles was Flügel h Alles, was Flügel ł					play title
Am Fluss.mp3	armegrinps				piuj uto
Am Tag, als Conny	y Kramer starb.m	1p3			
Amanda.mp3					
Amazing Grace.m					
Amboss Polka.mp Amore, Amore.mp					Right mouse
An der schönen b		3			button delete title
Anneliese.mp3		-			luc
Anton aus Tirol.m	p3				
Apache.mp3					
As Tears go bye.n Atlantis - Lambert.					
Atlantis - Orgel.mp					- Volume +
Auf auf zum Kamp	of, zum Kampf.m	p3			
Auf Auf Zum Kam					
Auf der Reeperbal	hn.mp3	×			
Esc ^ 1	2 3 4 5	6 7 8 9 0 B		Empty MP3 list 1	
<u>⊨</u> q w	ertz	uiopü+	- # Entf		
Feststell a	s d f g	h j k l ö ä			exit
<u> </u>	x c v b	n m , 습	En En		
Strg Alt		AltGr Str	rg ← ↓ →		

The directory of the existing **MP3 files** can be selected as desired, e.g. from a USB stick. With a double click on a title in the left selection window, this title is entered in the list selected on the right.

With the **play button** the entire list is played from the first track to the last track.

However, playback can be ended at any time with stop.Double-

click on a title in the MP3 list to start playback with this title.

The volume of the playback can be changed with the slider - Volume +.

Video

For each <u>title</u> a video can be deposited. The videos are always in the directory *VIDEO*.

If there is a video for a <u>title</u>, it will do so in the menu bar with **video** displayed.


Click on this button to test the video playback.

The supported formats is: mp4.


If you want to start the video with the title call, then **Service-> Settings** to put a hook on **video-automati**c.

Is a 2nd screen or projector connected to the computer, so the video is played on this.

If a video cannot be played, it is due to the missing codec for this format. The missing codecs can be installed under **Service-> Settings -> Video Codec**. You can access the PRESETs via **PRESETs** in the menu bar. Up to 20 presets can be created. If a PRESET is provided with <u>titles</u>, the label of the corresponding button is black. For empty PRESETs the label is gray.

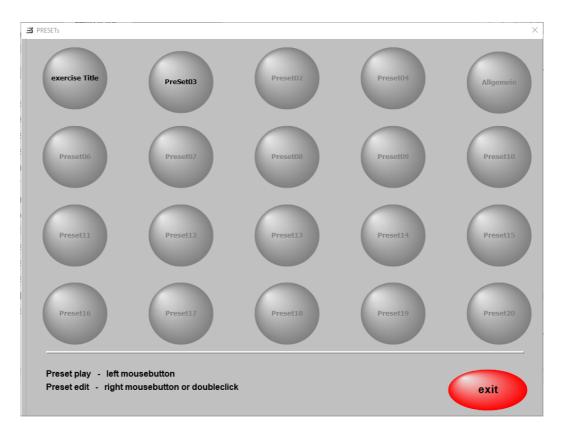

In a PRESET any number of <u>titel</u> can be stored in any order. The order can be changed at any time, as well as the content of a PRESET. To edit a PRESET, right-click on the corresponding preset or select the desired preset with a double-click for editing. Now the PRESET is opened for editing and on the left side all <u>titles</u> of the active <u>titlelist</u> are displayed.

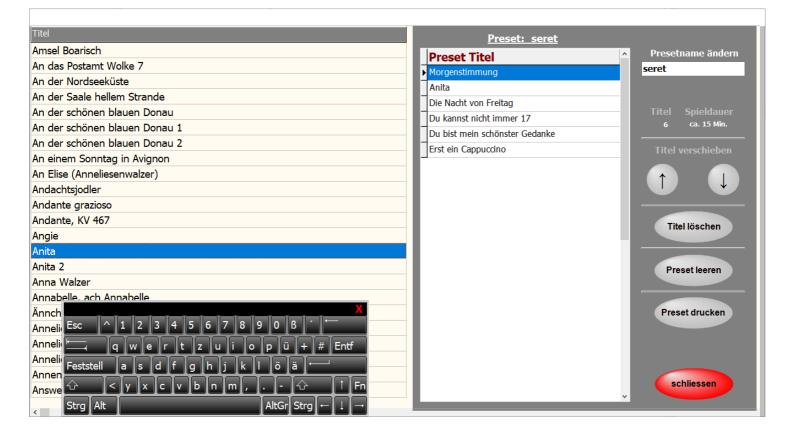

Double-clicking on a <u>title</u> in the <u>titlelist</u> will copy it to the PRESET. It is inserted under the blue marked <u>title</u> in the PRESET. Its position can be changed arbitrarily with the arrow keys. The PRESET can be given a name.

presetr	name change
seret	
title	playtime
6	ca. 15 Min.

With **Preset Print** the contents of the PRESET can be printed out.

The number of tracks contained in the PRESET and the approximate playing time of the entire PRESET are also displayed.



Close will save the PRESET.

To start a PRESET, just click on the corresponding button. Now the first <u>title</u> of the PRESET is called up and the notes are displayed.



A click on immediately calls up the next <u>title</u>. In this button the title following in the preset is displayed.

So you can put together complete programs in the PRESETs and retrieve as needed.

Via via, the PRESET can be ended at any time.

With back the previous <u>title</u> is called.

If you do not want to start a PRESET with the first <u>title</u>, select the edit mode of the corresponding PRESET and double-click on the desired start <u>title</u>. The PRESET will now be played from the start <u>title</u>.

PRESET copy


To copy a **preset**, drag the **preset** to the new **preset** while holding down the left mouse button. Then the complete content and the name of the **preset** will be copied.

Audio Record

 With ATMObyte Expander-Edition it is possible to make recordings in WAV or MP3 format. The recordings are saved in the subdirectory \ MyRecords \ WAV or \ MyRecords \ MP3. The existing MP3 files in the \ MP3 subdirectory are not changed or overwritten.
 The recordings can be listened to immediately for checking and e.g. copied to a USB stick. If recordings are to be made, this function Audio record must be activated.




The required buttons are then visible next to the score.

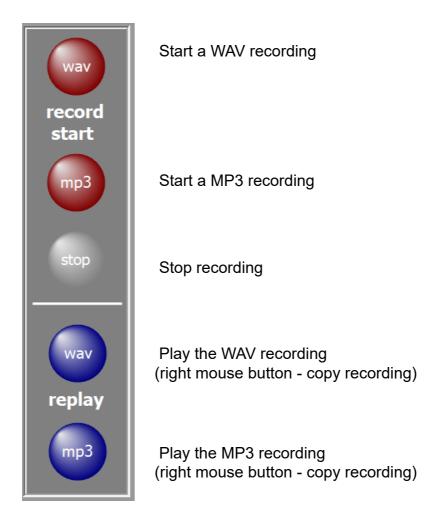

To copy the recording, select the storage location and confirm.



Für die Aufnahme des 0-db Ausgang der SEMPRA Orgel mit dem Mikrofoneingang des ATMObyte-Computers verbinden. Ist kein separater Eingang für ein Mikrofon vorhanden eine kleine USB-Soundkarte verwenden.

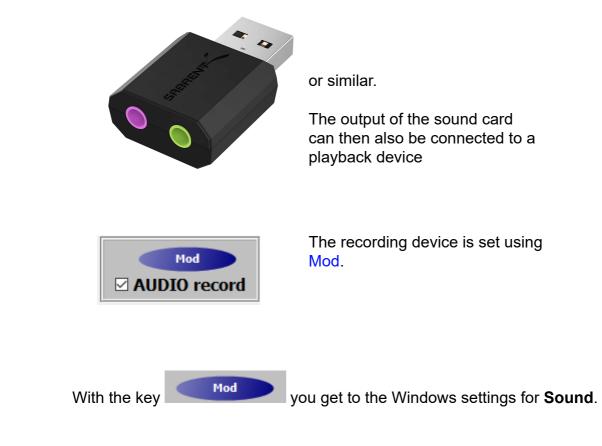

Sound

Audiogeräte verwalten

Eingabe

Eingabegerät auswählen

Mikrofon (3- USB Audio Device)	`	<
--------------------------------	---	---

Bestimmte Apps können für die Verwendung anderer Audiogeräte als dem hier ausgewählten Gerät konfiguriert werden. Passen Sie die App-Lautstärke und die Geräte in den erweiterten Soundoptionen an.

Geräteeigenschaften

Mikrofon testen



▲ Problembehandlung

Audiogeräte verwalten

Erweiterte Soundoptionen




App-Lautstärke- und Geräteeinstellungen Passen Sie die App-Lautstärke und die verwendeten Lautsprecher oder Geräte an.

> Select the correct input device here. In our case the USB sound card

Eingabegerät auswählen

Mikrofon (3- USB Audio Device)

Dann unter Geräteeigenschaften die richtige Lautstärke einstellen

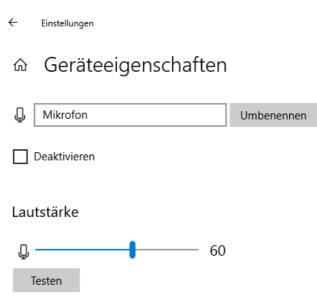


This setting only needs to be made once as we are connected to the 0db output of the organ. A value of 60 has proven to be beneficial in order to avoid overloading.

The level of the signal output of the USB sound card can also be adjusted here.



A possible connection between USB sound card and SEMPRA is shown here. **0db IN** and **0db OUT** are located on the back of the SEMPRA. All basic settings are made in the **SERVICE-> expanded**. This affects the MIDI settings, the display and the GEMA settings. Likewise, a complete backup can be made and there is the possibility of a remote maintenance by TeamViewer.

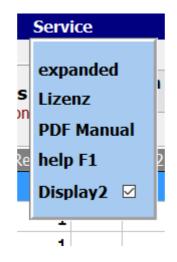

Settings				×
	MID	I - setting	<u>s</u>	
<u>Keyboard</u> BöHM SEMPRA	MIDI-channel 16 v	MIDI-IN device 6- UM-ONE Input Device N 6- UM-ONE	~	PRESESHOU SEMPRA - Edition
displa single page double page invert Videoautomatic	ay mode	L oder R	program backup	CALPHA service@alpha-medialine.de Online Support - click -
				close

The basic MIDI settings for keyboard control are in the Program part **SERVICE expanded** made.

	MID	<u>I - settings</u>
<u>Orgel</u>	MIDI-channel	MIDI OUT Device
BÖHM SEMPRA	16 ~	UM-ONE ~
		MIDI IN Device
		UM-ONE ~

For the MIDI connection, the MIDI channel set in the organ is specified. In our example, this is channel 16 for SEMPRA.

The USB-MIDI adapter used in this case is a Roland UM-ONE. This is selected as a **MIDI IN device** and as a **MIDI OUT device**. If another adapter is used, this is selected.

To use the registration call of the connected keyboard all you have to do is change the SEMPRA's MIDI setting as follows:

The required setting option ca	n be accessed via the MEN	NU button on the SEMPRA:
--------------------------------	---------------------------	--------------------------

«	BMC	21:24
Presets, Songs & Alben		Benutzerkonten
Rhythmus & Begleitung	2 7	Parts & MIDI
Sounds & Routing	3 8	System-Einstellungen
Taster & Regler	4 9	Sprache, Language
Mixer & Effekte	5 0	Instrument ausschalten
Eöhn		Böhm

Now select Parts & MIDI



then select MIDI

K 🔛 💭		MIDI global		± 21:24
MIDI-Anschluss:	Global MIDI in	MIDI out		
MIDI 1	MIDI in:			
	Kanal Presetwechsel	16	Start/Stop	aus
	Kanal ACC-Steuerung		Clock	aus
MIDE2	Kanal Schweller extern	ı 1	Controller Schweller ext.	
MIDI out:				
USB (CS) 1	Kanal Presetwechsel	16	Start/Stop	aus
Ka	Kanal ACC-Steuerung		Clock	aus
USB (CS) 2	Kanal Songtexte			
	Kanal Schweller global	1	Controller Schweller glb.	127
USB-MIDI 3	Taktgeber:			
	Aktivität nein	Zähler	1/4 Option	0
USB-MIDI 4	Dump:			
* *	!ln	it!	Edit Testen	Speichern

Select the connection used on the organ (rear) as the MIDI connection. **MIDI 1** and **MIDI 2** are available there. Usually **MIDI 1** is used.

If **MIDI channel 16** is used, the following settings apply to the SEMPRA: **MIDI-IN channel preset change 16**

Seite 57 von 92

MIDI-OUT channel preset change 16

Scalable scores

This option is useful when using <u>Hauptwerk</u>.

Seite 60 von 92

footswich

Bluetooth

USB



PageFlip Dragon



This foot switch - PageFlip Dragon - can be connected via Bluetooth as well as via USB. It is freely programmable via Bluetooth. If the footswitch is to be used only for turning pages, So the type - PageFlip Firefly - which can also be connected via Bluetooth is sufficient. The footswitches are also preprogrammed for AKcontrol and offered with the software.

With the PageFlip Dragon it is e.g. possible:

Select title Call up titles to turn the page play different Tusch's etc. Seite 62 von 92 If you have further questions, contact the manufacturer of **ATMObyte Expander-Edition** (info@alpha-medialine.de).



USB

Function in the program part Notes: Left foot key: Title list scroll backward Right foot key: Title list scroll forward Middle foot key: Call up titles

<u>Function for note display:</u> <u>Left foot key: to scroll backwards to the previous track or notes</u> <u>Right foot key: scroll forward through the next track or notes</u> <u>Middle footswitch: start sound or next track</u>

Thus, the software is also very suitable for musicians who do not use a keyboard but want to access a large pool of notes in the computer, e.g. Accordion player or sax player etc.

If the footswitch is only needed to turn the notes, a 2-button footswitch is also available. The foot switches are preprogrammed for **ATMObyte Expander-Edition** and offered with the software.

Microsoft wireless Display Adapter

With the help of a Microsoft display adapter, a projector or an additional monitor can be connected to the PC If a video belonging to the title is called up manually or with activated <u>video</u> <u>automatic</u>, this is always displayed on the projector or on the additional monitor. To do this, the Microsoft Diaplay adapter must be connected to the HDMI input of the projector or monitor. The USB plug of the adapter is used for the power supply and, if available, is connected to the USB socket on the projector or monitor. Otherwise, the power is supplied via a USB plug-in power supply. If everything is connected and the projector or monitor is switched on, the adapter is displayed on the screen. The connection to the projector or monitor can now be established via **SERVICE -> Wireless Display Adapter**. ATMObyte Expander-Edition can run on all Windows systems as of Win XP, even under Win 10.

On MAC systems **ATMObyte Expander-Edition** also runs, but VMware Fusion must be installed beforehand.


There is no special power required from the PC. The standard computers offered today meet the requirements of the software.

> ALL IN ONE PC's are best suited with a touch screen. You only have one device. These PCs are available in different sizes.

For a fixed installation on your home keyboard, this can be a bit bigger screen, about 23 ".

On the go, a netbook of about 13 "is enough.

To use the internal help documentation), there are 2 possibilities. The first option is to press the *F1 key* on the keyboard. The second possibility is the call via **Service-> Help** in the menu bar.

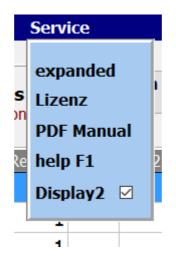


How can I simulate the right mouse button with a finger on a touch display?

Very easily.

Leave your finger on the desired position of the display (about 1 second), until a mark becomes visible around the finger (Win7 a square, Win8 and Win10 a circle). This basically applies under Windows and not only for **ATMObyte Expander-Edition**.

remote maintenance

In the area **SERVICE-> expanded** can with a Click on remote maintenance to connect to the internet. It then starts the remote maintenance program TEAMVIEWER. This allows direct help via the Internet.

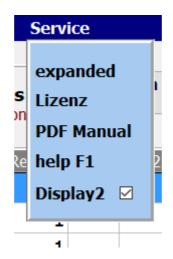

🗃 Service			×
MIDI - settings			
<u>Keyboard</u> BöHM SEMPRA	MIDI-channel MIDI-IN device 16 3- UM-ONE	~	
<u>displ</u> o single page o double page invert	And mode	data protection	info@alpha-medialine.de +49 (0)33604-63166 Online Support - click -
			close

Enter comments in sheet music

The existing PDF notes in ATMObyte can easily be supplemented with additional comments, etc.

Select the title, but do not call the notes yet and press F10 on the PC keyboard.

Now the PDF file with the notes is opened with the PDF program, which is set as the default program under Windows.

In general, this is e.g. the free **Acrobat Reader**. More recommendable is the free program **FOXIT READER**. Of course, any other PDF program can be used with the edit function. Page curl with SEMPRA

With the SEMPRA button


With the SEMPRA button

Creation and assignment of push button macros on the SEMPRA to turn the notes in ATMOBYTE

You can e.g. the rocker switch, the F-button below the display or - if available - the Use the pistons of your SEMPRA to turn the notes in ATMOBYTE. To do this, set up First, insert two button macros - one to page forward, one to page backward, and organize assign these macros to the desired (foot) switches.

We take the necessary settings in the menu**Taster & Regler – Taster-Preset** edit the SEMPRA. First call up this menu:

- # Call up the BMC menu of the SEMPRA using the **MENU** button
 - # Select the item in the menu Taster & Regler, then select the item in the submenu
 Taster-Preset editieren. This takes you to the corresponding edit menu.

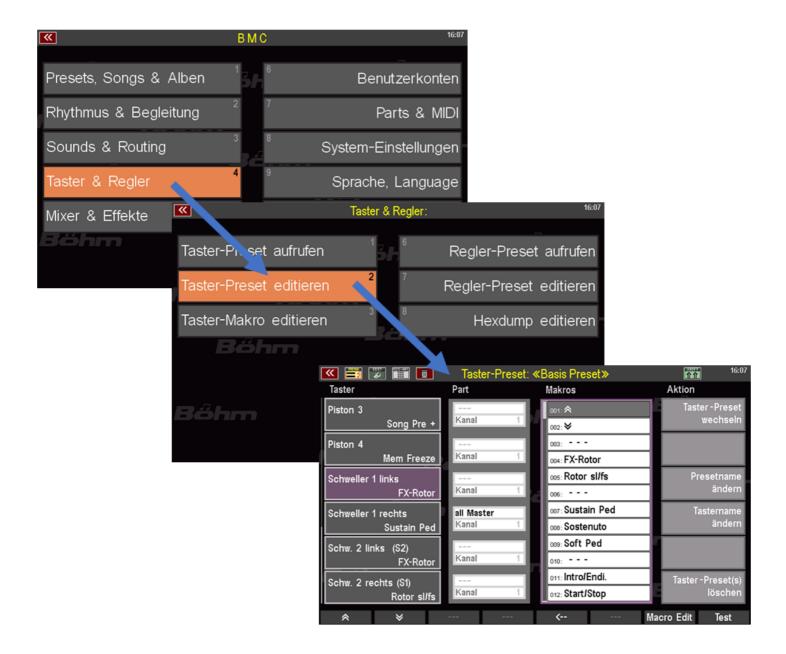

•# On the left side you can select the button that you want to assign a new function. By tapping the corresponding field, it is marked (purple display).

 \cdot # You can scroll through the button list with the two arrow buttons below the list. In our example we want to assign the functions for turning the notes to the two swell switches.

Therefore we have already selected the button "**Sill 1 left**" in the list:

	< 🧮 🐺 🏢 🗖	Taster-Preset:	«Basis Preset»	16:07
	Taster	Part	Makros	Aktion
	Piston 3 Song Pre +	 Kanal 1	001: 🛠	Taster - Preset wechseln
	Piston 4		003:	
ń		Kanal 1	004: FX-Rotor	
	Schweller 1 links		005: Rotor sl/fs	Presetname
	FX-Rotor	Kanal 1	006:	ändern
ų		all Master	007: Sustain Ped	Tastername
	Sustain Ped	Kanal 1	008: Sostenuto	ändern
	Schw. 2 links (S2)		009: Soft Ped	
	FX-Rotor	Kanal 1	010:	
	Schw. 2 rechts (S1)		011: Intro/Endi.	Taster - Preset(s)
	Potor ellfe	Kanal 1	012: Start/Stop	löschen
	* ×		<	Macro Edit Test

Now we first have to create the two button macros for scrolling forward and backward so that we can then assign them to the rocker switches:

•••# Touch the **F7 Macro Edit** button below the display.

📧 🧮 😿 🛅 🔲	Taster-Preset:	«Basis Preset»	16:07
Taster	Part	Makros	Aktion
Piston 3 Song Pre +	Kanal 1	001: 🛠	Taster - Preset wechseln
Piston 4		002: ¥ 003:	_
Mem Freeze	Kanal 1	004: FX-Rotor	
Schweller 1 links		005: Rotor sl/fs	Presetname
FX-Rotor	Kanal 1	006:	ändern
Schweller 1 rechts	all Master	007: Sustain Ped	Tastername
Sustain Ped	Kanal 1	008: Sostenuto	ändern
Schw. 2 links (S2)		009: Soft Ped	
FX-Rotor	Kanal 1	010:	
Schw. 2 rechts (S1)		011: Intro/Endi.	Taster - Preset(s)
Rotor sl/fs	Kanal 1	012: Start/Stop	löschen
* ¥		<	Macro Edit Test

•••# The macro editor opens. Here you can see the setting of the macro currently assigned to the selected button (in our example "FX-Rotor"):



•# Select the **Name** field and enter a name for the new push button macro to be created. First we want to create the macro for scrolling back the notes, so here we give e.g. the name "**Notes** -".



•# In the **Type** field we now define the function type for the macro. Since ATMOBYTE controls the turning of the notes via certain MIDI controllers, we enter the type **controller send** here.

4	ا 📰			Taster-M	akro-Editor			16:08
ľ	Makro	0	Hame Noten -		_		_	
ľ	Тур	Controlle	r senden	Schaltmoo	^{dus} Schalter +	Zeit (r	nns) O	
I	Controller 000: B			^{ziet} all Mas		-Wert 0	An-Wert 127	
I	Velocity 1	00	Lautstärke 100	Hall	40	rus 0	Panorama ()	
			Liste				Hexdump	lest

•# n the **Switching mode** field, you can define whether the button should later function as a **button** (+/- polarity) or as a **switch** (+/- polarity). Please enter the switch + type for the page flipping function.


«			Ū	Tas	ter-Makro-Edit	tor			16:08
	Makro	_	Name	_			_	_	
		0	Noten -						
	Тур	Controlle	r senden	S	chaltmodus Schalte	r +	Zeit (ms)	0	
1	_	Controlle			Scridite	<u> </u>		•	- 1
	Controlle 000: E			Ziel	all Master	Aus-Wert		An-Wert 127	
1	000. L							121	- 1
	Velocity		Lautstärke	н	lali	Chorus		Panorama	
11	Í	00	100		40	0		0	
			Linta				Have	. d	Teret
			Liste				Hex	dump	Test

Now we still have to select the controller that will later be connected to the when the button is pressed ATMOBYTE program is to be sent. ATMOBYTE uses it to scroll forward and backward the two MIDI controllers on the note pages **Nr. 96 Data increment** (Page +) bzw. **Nr. 97 Data decrement** (Page -).


•# Since we first want to create the macro for the **page back** function, we select **controller no. 97** using the **data wheel**.

«	🗾 🗾 🏢		Taster-Ma	kro-Editor			16:08
Mak	0	Noten - Noten - er senden	Schaltmode	⊪ Schalter +	Zeit (ms) 0	
	^{troller (F3)} 7: Data decr.	2	all Mas		i-Wert 0	An-Wert 127	
Velo	icity 100	Lautstärke 100	Hall 4		nus 0	Panorama O	
		Liste				Hexdump	est

The last thing we have to do is specify the **destination**, i.e. the MIDI interface via which the macro should later send the controller.Here we select the MIDI interface via which the PC with the ATMOBYTE software is connected to the SEMPRA In our example this is the MIDI Out 1 socket, so we select the **MIDI 1** interface as the destination.

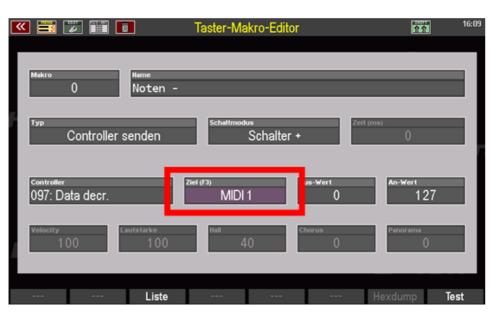


If in your case the PC (e.g. also a Cloud Studio with ATMOBYTE) is connected to the organ via another MIDI interface, select the corresponding entry as the destination (MIDI 1, MIDI 2, USB MIDI 1 ... 8).

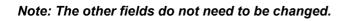

We have now made all the settings for our button macro "Notes -" and can do that Now save the new macro in a free position in the macro list of SEMPRA:

•# Press the **STORE** button to start the storage process. The list of the available button macros appears in the display.

•# Use the **data wheel** to select a free position in the list and confirm with **ENTER**. The macro "**Notes** -" is saved in the corresponding position.

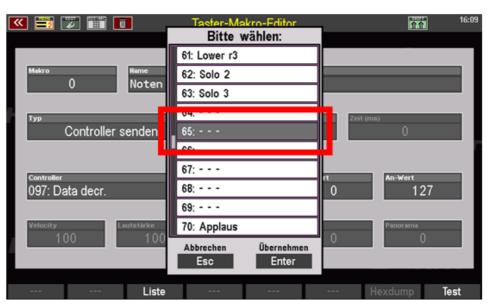

we can use the macro that is still called in the editor for scrolling back. We only need to adjust the relevant parameters and then the macro again under one save the new name in another free macro position.

Tap on the **Name** field and change the name for the wide macro, in our example we simply change from Notes to "Notes +" (scrolling forward).



Now we still have to select the controller for the "Scroll forward" function and change the Controller field to the entry 096: Data increment.

Makro	U	Taster-Ma	kro-Editor	-	<u>m</u>	16:10
65 ^{Typ} Controlle	Noten + r senden	Schaltmod	⊮ Schalter +	Zei	t (ms) ()	
Controller (F3) 096: Data incr.	Zie	MIDI		us-Wert 0	An-Wert 127	7
Velocity 100	Lautstärke 100	Hall 4	0	horus O	Panorama 0	
	Liste				Hexdump	Test

All other parameters, such as The type, **switching mode** and **destination** can remain unchanged. Apply here same parameters as before for the macro "Notes -" for scrolling back (Page-).

We can now also save the new macro "Notes +":

Press the **STORE** button to start the storage process. The list of the available button macros appears in the display.

Use the **data wheel** to select a free position in the list, e.g. directly below or above the previously saved macro and confirm with **ENTER**.

The "**Notes +**" macro is saved in the selected position.

🛯 📰 🗊 🔳	Taster-Makro-Editor Bitte wählen:	16:10
	57: Upper r4	
Makro Name 65 Noten	58: Lower 11	
65 Noten	59: Lower I2	
Тур	60: Lower r2	Zeit (ms)
Controller senden	61: Lower r3	0
	62: Solo 2	
Controller (F3)	63: Solo 3	rt An-Wert
096: Data incr.	64:	0 127
	65: Noten -	
Velocity Lautstärke	66:	Panorama
100 10	Abbrechen Übernehmen	
	Esc Enter	
Liste		Hexdump Test

We have now created the two macros for scrolling forwards and backwards through the notes in ATMOBYTE. Now of course we still have to assign these to the desired foot or F buttons and these Then save the assignment as a button preset:


In our example we want the left rocker switch with "Notes -" To scroll back and assign the right rocker switch to "Notes +" to scroll forward.

•# The button "Sill 1 left" is already selected (marked purple), otherwise please tap the desired button in the list.

•# Now select the desired macro in the Macros list, in this case **Notes** - and then press the F5 button <- under the display or the **ENTER** button.




 \cdot # The macro is assigned to the selected button position in the bar on the left.

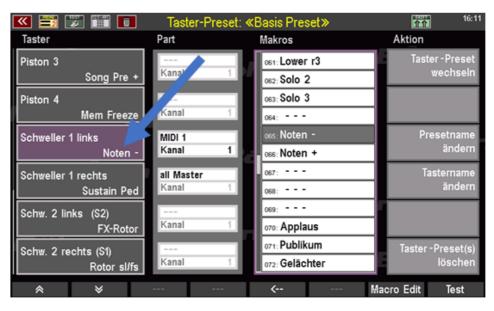


•# Now, in the list on the left, tap the button to which you want to assign the Notes + function for scrolling further. In our example, this is the "Swell 1 right" button.

Assign the macro "**Notes +**" to this button in the same way.

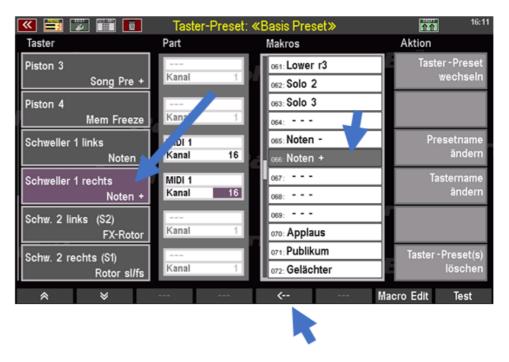

Set MIDI channels for push button macros

Perhaps you already noticed when assigning the two macros to the rocker buttons, that the fields in the Part column next to the two newly assigned sill switches suddenly activated. Here again we see the destination, i.e. the MIDI interface via which the corresponding function can be sent later when using the button, and also the respective MIDI channels 1... 16. So there can be a separate MIDI channel for each of the two buttons via which the controller function is then activated when the rocker switch is pressed be sent. # Please set channel **16** for both rocker buttons in the corresponding fields, because ATMOBYTE is preconfigured in such a way that it expects the controller for the sheet music on this channel.

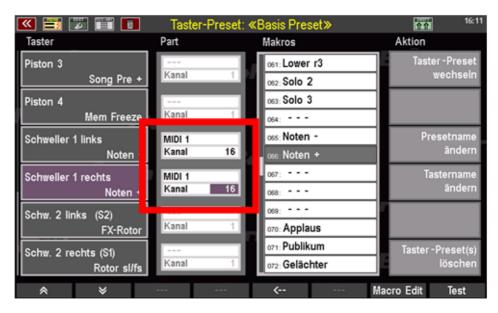

Save button preset


We have now made all the necessary settings and can now use the new assignment Save as a button preset. If you have made the setting in an existing push button preset you only need to press the **STORE** button, the button preset that you want to take over want to update in the list that appears and save with **ENTER** to confirm.

If you change the name for the button preset to be updated or a new one If you want to save the button preset in a free position, you should now first create a sensible one Assign a name for the new push button preset:

•# On the right, tap on the **Change preset name** field. A text entry box will appear.

Enter a name in the box, such as "Notes swell"

•# Confirm your entry with **ENTER**.

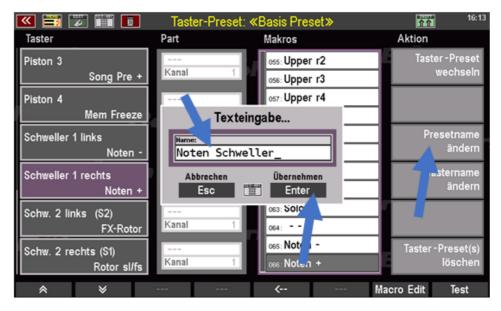

Now we can finally save the new push button preset under the selected name:

•# Press the **STORE** button on the control panel to initiate the storage process.

 \cdot # In the list that appears, select a free button preset position (or one that has already been assigned, if you want to save this with the new setting).

•# Confirm your entry with **ENTER**.

💌 🗮 🐹 🏢 🔲	Ta	ster-Preset: «Noten Schwelle	r» 16:13
Taster	Pa	Bitte wählen:	Aktion
Piston 3	Γ.	U-1: Basis Preset	Taster - Preset
Song Pre +	Ka	U-2:	wechseln
Piston 4		U-3:	
Mem Freeze	Ka	U-4:	
Schweller 1 links	м	U-5: Noten Schweller	Presetname
Noten -	Ka	U-6: 🛛 🖊 🚬	ändern
Schweller 1 rechts	M	U-7:	Tastername
Noten +	K	U-8:	ändern
Schw. 2 links (S2)		U-9:	
FX-Rotor	Ka	U-10:	
Schw. 2 rechts (S1)	6	Abbrechen Übernehmen	Taster - Preset(s)
Rotor sl/fs	K	Esc Enter	löschen
* *		<	Macro Edit Test

The new button preset is now saved and can then be called up in the usual way and used.

Call up a multi-page note file in ATMOBYTE and press the two alternately Rocker switch. If you have made and saved all settings correctly, you should the right switch scrolls one (double) page each time it is pressed, the left one Scroll back the rocker switch accordingly. With the SEMPRA pedal buttons

Mit PEDAL Tasten

Pedaltasten für die "Vor- Zurück-Blättern"-Funktion an der SEMPRA vorbereiten:

Um das MIDI-Signal des Basspedals an das ATMObyte zu übertragen, muss bei der SEMPRA der "Pedal MIDI out"-Part im Partselektor aktiviert werden.



Dazu drücken Sie am besten auf dem Bedienpanel im Bereich "SOUND SELECT" den Button "Pedal" (siehe Abbildung).

Dann öf fnet sich der "Partselektor" mit den Parts, die im Ihrem SEMPRA Modell zur Verfügung stehen. Wählen Sie dort nun den Part "Pedal MIDI out" aus, so daß er rot

📧 🛅 📰		Pedal N	/IDI out		111	18:23
		002:001				
No Sound	•	No Sound				
		Lautstärke	127			
		•	127			
		Hell	40			
		•	127			
		Chorus	0			
		0	127			
		Panerama	°			
		-63 1	63			
		Stimmung				
Pedal MCI out	0	-63 l Transp.	63			
No Sound			<u> </u>			
		-40 1			-	
Stumm Solo		Freeze	Memory	Solochord	Portam.	Monoph.
otanini oolo						
State		Pedal N	IDI out			19:01
🛯 📰 📰		002:001	11DI out		- -	19:01
Redal 1		002:001 No Sound			_	19:01
🛯 📰 📰		No Sound Globale Par				19:01
Resert Bass Guitar 3 F	Part-Hr. Nam	No Sound Globale Par	tparamete			19.01
Redat Bass Guitar 3 F	• Part-Hr. 31 Reuting	002:001 No Sound Globale Par a dal HIDI (Region	tparamete			19.01
Redat Bass Guitar 3 F	Part-Hz. 31 Rearling MIDI out	002:001 No Sound Globale Par a dal HIDI (Region Lov	tparamete	EDOT -> Test		19.01
Resert Bass Guitar 3 F	Part-Hc. 31 Eco MIDI out Engang	002:001 No Sound Globale Par a dal HIDI (Region	tparamete out	F EDIT -> Test Ostioner:		19:01
Redat Bass Guitar 3 F	Part-He. 31 Point Resulting MIDI out Engang Master	002:001 No Sound Globale Par # dal HIDI (Region Lov Kanal	tparamete	EDIT → Test Ostonen: Iaden J		19.01
Redat Bass Guitar 3 F	Part-Hc. 31 Eco MIDI out Engang	002:001 No Sound Globale Par a dal HIDI (Region Lov	tparamete out	F EDIT -> Test Ostioner:		19.01
Resert Bass Guitar 3 F	Part-Hz. 31 Rearting MIDI out Engang Master Aungang MIDI 1	802:001 No Sound Slobale Par e dat MIDI (Regon Lov Renet	tparamete out ver full 3	r EDIT → Test Ostonen Iaden J speichern J		19.01
Rest II Bass Guitar 3 F	Part-Hc. Rearting MIDI out Empany Master Auroparty	802:001 No Sound Slobale Par e dat MIDI (Regon Lov Renet	tparameter but ver full 4 3 0b	EDIT → Test Ostonen: Iaden J		19.01
Redard 1 Bass Guitar 3 F	Part-Hr. Harr 31 Point MIDI out Engang Master Ausgang MIDI 1 Abbrecht	002:001 No. Sound Globale Par e dal HIDI (Repon Lov Repon Lov	tparameter but ver full 4 3 0b	r EDIT->Test Ostonen Iaden J speichern J ernohmen		19.01
Redal 1 Bass Guitar 3 F	Part-Hr. 31 Eco MIDI out Empany Master Nongarro MIDI 1 Abbrecht Esc	002:001 No. Sound Globale Par e dal HIDI (Repon Lov Repon Lov	tparameter but ver full 4 3 0b	r EDIT->Test Ostonen Iaden J speichern J ernohmen		19:01

umrandet erscheint, wie in der Abbildung 2 unten links zu sehen. Sollte der Part auf "Stumm" geschaltet sein, aktivieren Sie durch einmaliges drücken auf die "Stumm" Schaltfläche (F1) links unten im Bildschirm.

Stellen Sie nun sicher, daß dieser Part tatsächlich auf die Ausgabe von MIDI-Daten auf Kanal 3 eingestellt ist (Werkseinstellung). Drücken Sie zur Kontrolle auf "Part-Setup" (Shift F4). Sie sehen dann ein Popup-Fenster, daß, wie in Abbildung 3 zu sehen, die angezeigten Werte zeigen muss.

Wenn alle Werte stimmen, drücken Sie ENTER, um das Popup-Fenster wieder zu schließen.

Nun können Sie die Funktion bereits ausprobieren, die beiden hinteren (rechten) Pedaltasten Ihrer SEMPRA sollten nun die Noten im ATMObyte vor- bzw zurückblättern können.

Nun können Sie die Einstellungen noch verfeinern:

K 📰 📰	Pedal MIDI out	H2 112	
	002:001		
No Sound	No Sound		
NU SUUNU	Leutstarke 127		
	141 40		
	127		11
	Chanus 0		
	127		
	Ponorana 0		
	Stimming		
	-ca 61		
No Sound	C Trensp.		
000010	-48 48		
Stumm Solo	Freeze Memory S	olochord Portam. Monoph.	

Shift drücken und festhalten. Dann ändert sich die Bedienleiste am unteren Bildschirmrand

	•							
127	· [📧 🛅 🔠		Pedal MI	DI out		111	18.23
°				102:001				
127		No Sound		No Sound				
		REALING THE REAL PROPERTY OF T		Leutsterke	127			
					127			
+				Hall	40			
\$3					127			
				Cherus	0			
Memory Solochord Portam. Monoph.					177			
Memory Solochord Portam. Monoph.				Pasarana				
				-63 T	61			
				Stimming				
		Teacher of		-63 T				
		No Sound	-	Tremp.				
				-48 1	41		_	
Hier nun "KeyZone (F2) dr	ücken. 📂	Dynamik Key-Zon	e Optionen	Part-Setup	I Init I S-Cr	d.Mode kapi	iaraa ei	rligen

Nun fragt die SEMPRA, in welchem Bereich die Pedal-MIDI-Daten gesendet werden sollen.





Drücken Sie nun auf die vorletzte Pedaltaste (von rechts) -> Drücken Sie dann auf die letzte Pedaltaste (von rechts)



Nun sehen Sie in der Part-Übersicht, solange die Shift-Taste gehalten wird, daß im "Pedal MIDI out"-Part sämtliche Tasten ausgegraut dargestellt werden, außer die beiden soeben eingestellten Tsten, die nun die erforderlichen MIDI-Signale an das Atmobyte senden können.

Allerdings sehen Sie, daß auch die anderen Pedalbereiche hier aktiv sind und Töne spielen werden.

Um zu unterbinden, daß Basstöne auf den beiden, als Vor- Zurück-Schalter umfunktionierten

Pedaltasten mitklingen, muss nun noch die "Key-Zone" für die anderen Pedal-Parts eingestellt bzw eingegrenzt werden: Tippen Sie auf den jeweiligen Part, dessen Key-Zone Sie einstellen möchten. Je nach Modell und Ausstattung können das viel mehr sein, als auf dieser Darstellung, die nur über einen einzigen Part (Pedal 1) verfügt. Sollten Sie also weitere Parts vorfinden, müssen die folgenden Einstellungen für jeden der Parts erfolgen, wenn diese im jeweiligen Preset zum Spielen verwendet werden.

Read Bass Guitar 3 Pd	Pedal 1 930 Bass Guitar 3 Pd Lautatarke 127 0 127 Hat 0 127		Dann ände	en und festhalte rt sich die Bedie n Bildschirmrand	enleiste	
	Chorus 0	« 📰	21(1) 11	Pedal 1		19:35
	0 127			003:038		
	Panceama	Pade 1 Bass Gui	• tar 3 Pd	Bass Guitar 3 Pd		
	-63 63 Stimmung D			Leutstärke 127	1	
	-63 63			0 127 Hall	r	
Pedal MELlout No Sound	Transp.				I	
	-48 48			Chorus	1	
Stumm Solo ····	 Freeze Memory Solochord Portam. 	Monoph.		0 127		
				Panorama		
				-ca i ca		
				Stimmung		
		Pedal MELour No Soun	d d	-63 63 Transp. -40 40		
		Dynamik	Key-Zone Optionen	Part-Setup I Init II	S-Crd.Mode kapi	ieren einfügen

Jun fragt die SEMPRA, in welchem Bereich der Pedalton erklingen soll

🕶 🎫 📰	Pedal 1		19:35	📧 🛅	11000	Ped	al 1	E 6	1 12:35
	003:036					003:038			
Bass Guitar 3 Pd	Bass Guitar 3 Pd Leutsterke 127				uitar 3 Pd	 Bass Guitar Lextsterke 	3 Pd 127		
Bitte erste Taste des neuen Bereiches auf dem gewählten Part drückenl					-(etzte Taste des neuer hes auf dem gewählte Part drückenl		
	Abbrechen Esc					Abbre			
	Stimmung (Stimmung			
Pear MD az No Sound	-48 48				nd				
Dunamik Key-Zone Ontionen	Part-Satura II Init II	S-Col Mode kani	eren einfilmen	Dynamik	Key-Zone Optic	nen Part-Setup	I Init I S-Crd.Mod	kopieren	einfügen

Drücken Sie nun das linke "C", also den tiefsten Pedalton und dann den letzten Pedalton rechts, der inter den zuvor für den MIDI-Part festgelegten Pedaltasten liegt.
Diesen Vorgang wiederholen Sie ggf für alle weiteren Pedalparts, die im jeweiligen Preset verwendet verden.

s 📰	100		Ped	al 1		12	611	19:35
			003:038					
Bass Guitar 3 Pd		Bass Guitar	3 Pd					
		Lautstarke	127					
				127				
			Hell	40				
			0 127					
			Cherus	0				
			0	127				
			Penerame	0				
			-63 Ī	63		_		
			Stimmung					
Pedal MDI out No Sound		-63	63		_	_	_	
		Trensp.						
			-40 T	48				
Dynamik	Key-Zone	Optionen	Part-Setup	!! Init !!	S-Crd.Mede	kapiero	an eir	

In unserem Beispiel an einer SEMPRA SE20 mit 17-Tasten-Pedal sehen bei Drücken der Shift-Taste die Key-Zones nun so aus, wie in der Abbildung. Sie sehen deutlich die hellen Tastenbereiche, die die jeweils spielbaren Pedaltasten symbolisieren.

Tipp / Idee: MIDI out für alle Presets fest einstellen

Falls Sie die Vor- Zurück-Blättern Funktion dauerhaft und bei allen Presets der SEMPRA verwenden wollen, können Sie mit der folgenden Einstellung verhindern, daß die Einstellungen sich bei jedem Preset, insbesondere Werks- oder Kaufpresets, wieder verstellen:





Diese Einstellungen könnten Sie für alle Pedalparts vornehmen, dann würde auch die "Key-Zone" der klingenden Pedalparts erhalten bleiben und nicht in den Vor-/Zurück-Schalter hineinragen. Allerdings werden dann auch die Pedalsounds und Lautstärken der Presets ignoriert.

Dieser Trick/Tipp ist also mit Vorsicht zu genießen und in der Praxis zu Testen.

Print out the title list

There is no direct printing option for a title list. But there is still a little detour.

! Go to the Presets area

- 2. Right-click to open an empty preset for editing
 - 3. Click on "Add all titles to the PRESET"
- 4. Give the preset a name meaning the name of the title list

5. Now print the preset.

Now you have a printout of the current title list. If you have previously selected a SET or keywords in the title list, the above function can of course be used to print out the selected title list.

Hauptwerk

Wird das Programm in Verbindung mit Hauptwerk verwendet, ist die Option **Noten scalierbar** hilfreich. Diese Funktion befindet sich in SERVICE/ERWEITERT.

A Einstellungen						- 🗆 ×
					GEMA/SUISA	
Notenanz 1 Seite 2 Seiten Noten scalierbar Invertieren Videoautomatik 	The Second Secon		<u>Datensio</u>	<u>cherung</u>	CLAL service@alpha- Online S - clic	medialine.de
Desktop Hintergrund Programmupdate Video Codec schliessen						

Die Anzeige der Noten erstreckt sich normaler Weise über den gesamten Bildschirm und verdeckt damit das Program **Hauptwerk**. Um dies zu verhindern öffnet man Hauptwerk und positioniert das Program so, dass die Orgelsetzer sich am unteren Bildschirmrand befinden. Dann aktiviert man in ATMObyte die Option **Noten scalierbar**. In der Hauptansicht von ATMObyte (Titelliste) verschiebt man den unteren Rand von ATMObyte so weit nach oben, bis die Orgelsetzer von **Hauptwerk** zu sehen sind. Werden jetzt die Noten aufgerufen, so bleibt auf den Monitor der untere Rand frei und die Orgelsetzer von **Hauptwerk** sind sichtbar und können bedient werden.

Hauptwerk

If the program is used in conjunction with Hauptwerk, the **Scalable scores** option is helpful. This function is in **SERVICE / EXTENDED**.

A Settings		- 🗆 X			
MII Orgel MIDI-channel BöHM SEMPRA 16 ✓	DI - settings <u>MIDI OUT Device</u> Microsoft GS Wavetable Synth ~ <u>MIDI IN Device</u> UM-ONE ~	GEMA/SUISA/AKM-Liste Bei Programmende erstellen löschen drucken 🖨			
invert	program backup	CALPHA service@alpha-medialine.de Online Support - click -			
desktop background Programmupdate Video Codec close					

The display of the notes normally covers the entire screen and thus covers the **Hauptwerk** program. To prevent this, open Hauptwerk and position the program so that the organ composers are at the bottom of the screen.

Then activate the option Scalable scores in ATMObyte.

In the main view of ATMObyte (title list) you move the lower edge of ATMObyte up until you can see the organ composers from **Hauptwerk**. If the notes are now called up, the lower edge remains free on the monitor and the organ composers from **Hauptwerk** are visible and can be operated.